

Installation Instructions

Universal Camlock Instructions

1. All camlock boxes are shipped with the handle oriented for driver side installation as shown below in figure 1.
 - a. To install the box on the driver side of the vehicle
 - i. No changes are needed.
 - b. To install the box on the passenger side of the vehicle
 - i. Remove both fasteners from latch hasp to remove hasp and washers with gaskets.
 - ii. Clean the surface behind hasp and also inside the door around the bolt holes.
 - iii. Reinstall latch hasp onto the box door in the position as seen in figure 2 making sure the gaskets on the washer are facing the door. Tighten the latch hasp bolts to 11 ft-lbs.
 - iv. Flip the box upside down as seen in Figure 3.
2. Mount toolbox per toolbox mounting instructions provided.

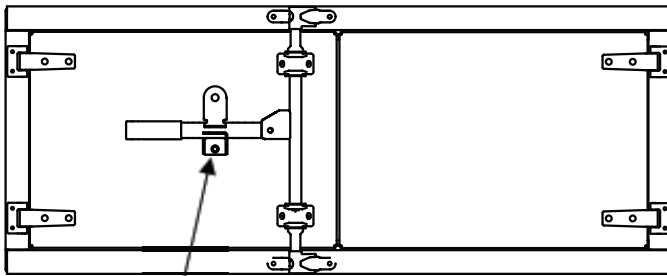


Figure 1

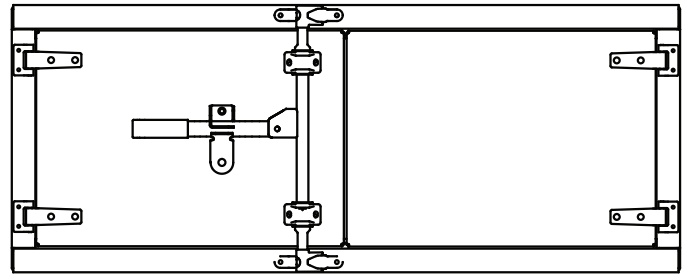


Figure 2

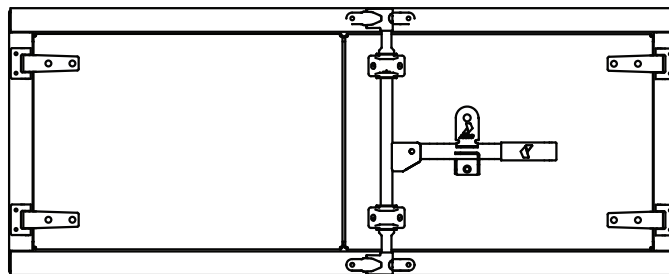


Figure 3

Latch Hasp

INDIANAPOLIS, IN
Indianapolis, IN 46241
800-535-9545
FAX: 317-244-1311

OMAHA, NE
Omaha, NE 68137
800-535-9545
FAX: 402-895-6129

KENT, OH
Kent, OH 44240
888-237-2262
FAX: 330-626-3277